



RCA ViSYS 25424RE1 Base Disassembly

Take apart the rear base from the front base on RCA ViSYS 25424RE1

Written By: Mit Patel



INTRODUCTION

Sometimes the issues with the phone may deal with an internal malfunction. This guide demonstrates how to take apart the base of the speakerphone as a prerequisite for internal technical repair. The base must be removed before accessing the internal parts.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Base



- Remove the eight 11mm screws found on the bottom side of the base with a Phillips #00 screwdriver.


Step 2



- Use a plastic opening tool to separate the back and front pieces.

⚠ Gently remove the back cover, because the wires are connected to each piece.

Step 3

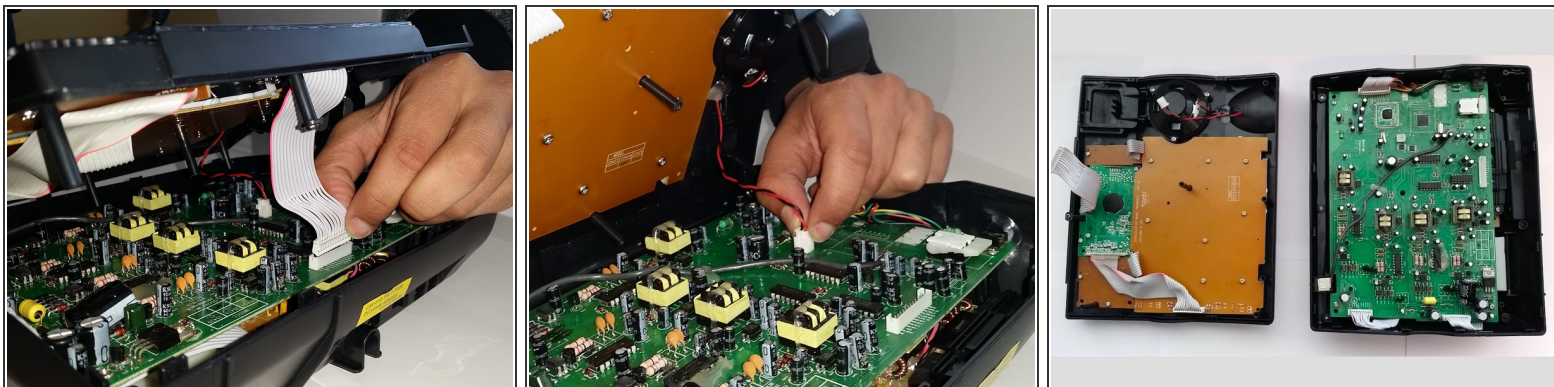

- Unclip the wires that connect the front piece to the circuit board on the back piece.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-05 03:37:41 PM.